



## VISTA CRUISE® INSTALLATION INSTRUCTIONS

Customer Service (616) 532-2357

- **HOLDS THROTTLE AT DESIRED SPEED**
- **EASILY INSTALLED – REQUIRES NO GRIP REMOVAL**
- **RELIEVES ARM AND WRIST STRAIN**
- **HELPS ECONOMIZE ON FUEL**
- **ATTRACTIVE – LOOKS LIKE IT BELONGS**
- **THROTTLE CAN ALWAYS BE MANUALLY OPERATED EVEN WITH VISTA CRUISE IN THE “ON” POSITION**
- **MOLDED FROM DURABLE GLASS FILLED ZYTEL® NYLON**

**NOTE:** VISTA CRUISE fits motorcycles with 7/8" handlebars ONLY.

### INSTRUCTIONS

Swing face of VISTA CRUISE away from crown so that there is at least one inch of clearance between face and crown. Pull grip flange back so that the VISTA CRUISE can be inserted between grip flange and switch housing. Tilt bottom of VISTA CRUISE with the retaining foot so that it can be slid between throttle cables. (Some filing of the retaining foot may be necessary) Then with retaining foot between throttle cables, close VISTA CRUISE around sleeve. Install the thumb lever inserting threaded shaft thru face. Then put spring on threaded shaft & put shaft into crown. Be sure the brass adjustment screw is installed into hold at rear of crown with slot facing outward. Put slotted thrust washer between VISTA CRUISE and grip flange. Allow grip flange to go back to normal position. Using screw key provided, tighten adjustment screw until thumb lever is snug (not tight) against face of crown. (If the grip flange diameter exceeds diameter of thrust washer, trim grip flange to match diameter of thrust washer.) Turn grip about ¼ turn and depress thumb lever to on position and release grip. If VISTA CRUISE does not hold grip in set position, tighten at ¼ turn increments until VISTA CRUISE holds throttle setting. If further adjustment is required after riding, tighten in ¼ turn increments. **Do not over-tighten!**

**CAUTION:** Adjustment is very critical and in no case should screw be turned in or out more than ¼ turn before checking adjustment.

Occasionally remove the VISTA CRUISE and wash with a mild detergent in lukewarm water.

### ADJUSTMENT OF VISTA CRUISE

To adjust, with screwdriver turn adjustment screw (See Diagram A) clockwise for tightening, and counterclockwise for loosening.

To check VISTA CRUISE in “OFF” (UP) position twist throttle to full “ON” and release grip. Throttle spring should return throttle to “OFF” position.

To adjust VISTA CRUISE in “ON” (DOWN) position twist throttle to midway point, and press VISTA CRUISE to “ON” (DOWN) position with thumb. Release hand from grip. Throttle should stay in midway position.

