



## Custom Dynamics® BRIGHTSIDES™ Installation Instructions

We thank you for purchasing the Custom Dynamics® Amber BRIGHTSIDES™. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this produce please call Custom Dynamics® at 1(800) 382-1388.

**Part Number: SPY-BRIGHTSIDE-A**

**Package Contents:**

- BRIGHTSIDES™ LEDs (Pair)
- Posi-Tap™ Connectors (4)
- 3M Promotor Ampule (If Applicable)
- 4" Black Tie-Wraps (8)
- Tie-Wrap Holders (4)

**Fits:** 2008-2016 Can-Am Spyder® RS, 2008-2012 RS-S, 2010-2018 RT, 2010-2012 RT-S, 2013-2015 ST, 2015-2018 F3



Please read all Information below before Installation

**Important:** This product is designed and intended for use as auxiliary lighting only. It is NOT intended to replace any original equipment lighting installed on the vehicle and should not be used for that purpose. This product must be wired so that it does not interfere with any original equipment lighting.

**Note:** Some wiring knowledge may be needed for this installation. Consult your vehicle detailed service manual for wiring information and color codes. Use a meter or test light to verify wiring before cutting or tapping any vehicle wiring. If the steps contained within are beyond your skillset, do not attempt installation, contact a qualified mechanic or dealership to assist you.

**Safety First:** Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Turn fuel supply valve to the off position before starting installation. Be sure vehicle is on level surface, secure and cool.

**Warning:** Disconnect negative battery cable from battery; refer to owner's manual. Failure do to so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.

**Note:** 3M Adhesion promotor is classified as a sensitive chemical and cannot ship any carrier by Air or international. Custom Dynamics® may not be able to ship promotor with orders in these cases, and will be removed from package.



**Posi-Tap™ TAP CONNECTOR**

**QUICK & EASY**

- 1 Insert Hot Wire
- 2 Tighten
- 3 Strip Leads
- 4 Insert & Tighten

- TAPS WIRES WITHOUT CUTTING
- TOTAL WIRE INTEGRITY IS MAINTAINED
- INSTALLS IN SECONDS BY HAND
- NO CRIMPING OR TOOLS REQUIRED
- REUSABLE OR PERMANENT
- LESS RESISTANCE
- VIBRATION PROOF
- FULLY INSULATED

**POWERS UP TO (4) LEADS AT ONCE!**

**NO CRIMPING**

**NO TOOLS NEEDED**

### Installation


Using a suitable pry tool, carefully remove the stock front fender reflector taking care to not damage fender or the paint.



**Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST**

## Installation Instructions - Page 2


Thoroughly clean this area of any old tape and glue. Once clean, wipe down this area with the enclosed 3M promoter pad.

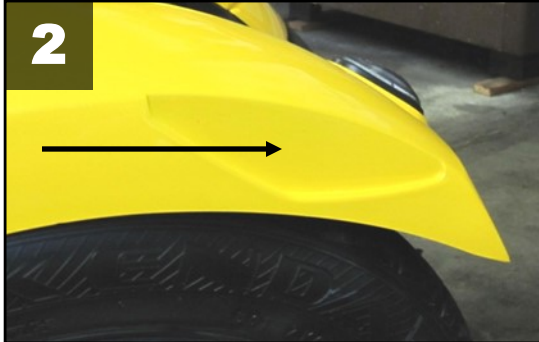

Hold BRIGHTSIDES™ light up to fender noting location where wire meets fender, drill ¼ inch hole in fender for wire to pass through.




Insert wire from BRIGHTSIDES™ through hole in fender and remove backing from tape, firmly press BRIGHTSIDES™ into place. Be careful to align BRIGHTSIDES™ light in the fender recessed area.

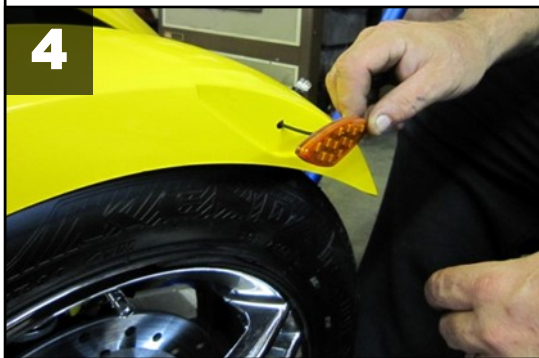

Using 2 tie wraps and 2 holders, slide tie wrap through holder slot, create a small loop for wire, then slide the 2 holders onto BRIGHTSIDES™ wire.



Although shown on the outside the fender in the picture to better show their mounting locations, treat the underside of the fender with the 3M promoter ampule and stick the tie-wrap holders with wire roughly in these areas as shown on the UNDERSIDE of the fender to hold wire in place.

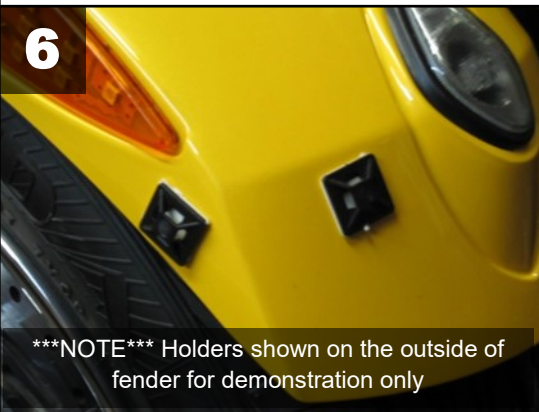

7. Remove the front fender tip light from fender. See service manual for instructions on fender tip bulb replacement.
8. Using the supplied Posi-Tap™ connectors, install Posi's onto the wires of BRIGHTSIDES™ using the red ends.
9. Tap the wires of the fender tip light with the grey end of the Posi-Tap™ Connectors as follows:  
  
COLOR wire from BRIGHTSIDES™ to ORANGE wire going to fender tip light [ + ] Positive  
  
BLACK wire from BRIGHTSIDES™ to BLACK wire going to fender tip light [ - ] Negative.
10. Reinstall front fender tip light into fender, test operation.
11. Repeat procedures 1 through 8 for remaining fender.