



Scan the QR code to the left to be directed to the **How To Video** by Low and Mean

←
Let us know how your installation went. Send an email to techsupport@lowandmean.com



Parts Included:

Shorty Rear Fender
4 Bolts
4 Rubber Washers
Loctite

READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

- 1 Remove seat. If you're removing your stock seat you can watch a video on youtube. Low and Mean channel - search for Low Rider Seat Install.
- 2 Unplug cable running to rear fender. Fig. 1
- 3 Remove bolts holding rear fender to frame. 2 bolts on each side. Fig. 2
- 4 Remove stock fender.
- 5 Carefully slide your Shorty Rear fender into place.
- 6 Slide supplied rubber washers between the Shorty Rear Fender and the frame. Install bolts just a couple of turns. Do this for all 4 washers and bolts. Fig. 3
- 7 Tighten all 4 bolts rotating between each so they tighten evenly.
- 8 Reinstall seat.

Fig. 1

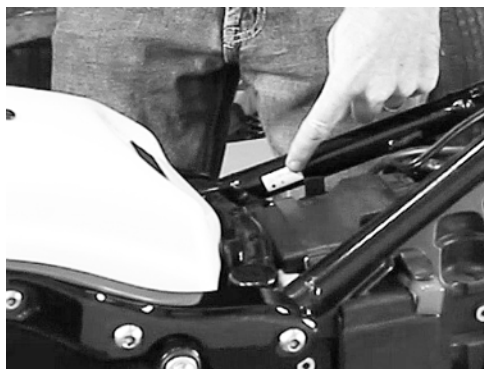


Fig. 2



Fig. 3

