



Scan the QR code to the left to be directed to the **How To Video** by Low and Mean

←  
Let us know how your installation went. Send an email to [techsupport@lowandmean.com](mailto:techsupport@lowandmean.com)



**Parts Included:**

Chin Fairing  
Bolt  
Rubber Washer  
Aluminum Spacer  
SS Washer  
Loctite

**READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION**

- 1 Remove Bolt holding on horn. Fig. 1
- 2 Slide supplied Bolt through the hole on your new Low and Mean Chin Fairing. On the back side, slide on rubber washer then aluminum spacer followed by the SS washer. Fig. 2
- 3 Position Chin Fairing in place.
- 4 Slide the hook on Chin Fairing around frame mounting bracket. Fig. 3

- 4 You may have to slide the Chin Fairing back and forth and up and down to get the hook to slide in correctly. We recommend you watch the install video to see how this is done.
- 5 On other side slide hook up and around bracket. Fig. 4
- 6 Position Chin Fairing in place, align horn through the hole in the Chin Fairing. Carefully tighten the bolt making sure the horn is aligned with the hole in the Chin Scoop (use loctite). Fig. 5
- 7 Check to make sure the horn does not vibrate on the Chin Scoop. Double-check your Chin Scoop after a couple rides.

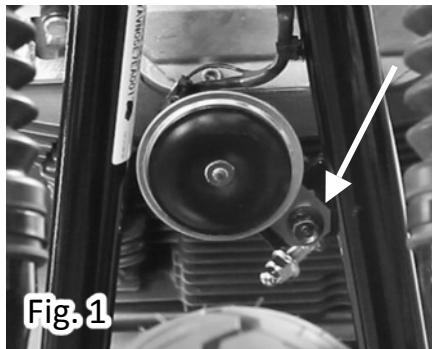


Fig. 1

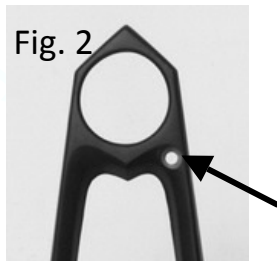


Fig. 2

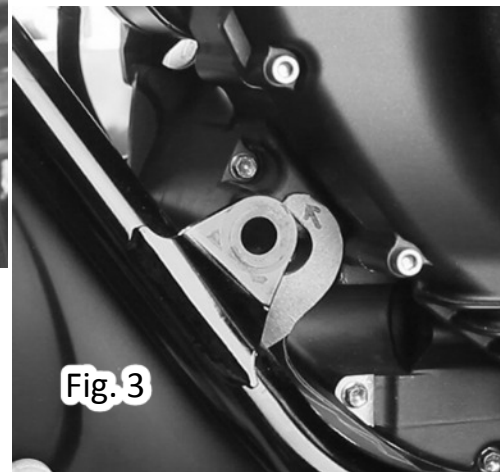


Fig. 3

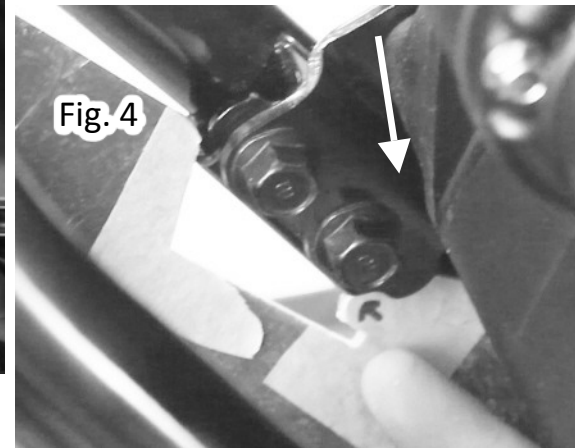


Fig. 4

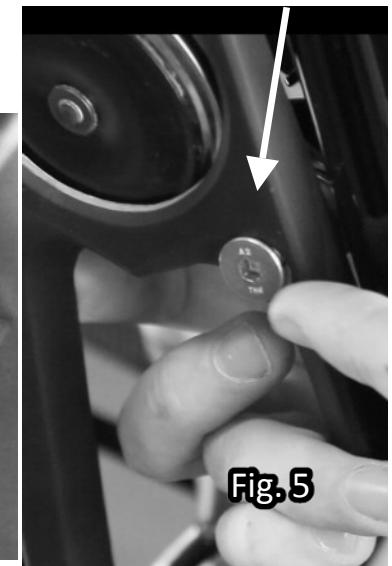


Fig. 5