



# INSTALLATION

## HEADBOLT COVERS

## 8106

FITS: ALL H-D MODELS 1986-UP (EXCEPT V-ROD)

PART#	INCLUDED
408106	4 Head Bolt Covers – Chrome
200393	4 8-32 x 3/16" Set Screws
308106	1 Instruction Sheet

### TOOLS SUGGESTED

5/64" Allen wrench

### PROCEDURE AVERAGE TIME: 5 MINUTES

**STEP 1** Place a chrome head bolt cover over each of the head bolts.

**STEP 2** Tighten the set screws in each cover securely with a 5/64" Allen wrench.

*Ride On!*

### E-MAIL

techsupport@kuryakyn.com  
or call 715.247.2983

### WARRANTY

Kuryakyn™ warrants that any Kuryakyn product sold hereunder, if properly installed, maintained and operated under normal conditions, shall be free from any defects in materials and workmanship for a period of one (1) year from the date the Kuryakyn products are sold to the customer.


CONSEQUENTIAL DAMAGES:  
Kuryakyn shall not be liable for any consequential or incidental damages.

### ABOUT OUR CATALOG

For purchasing Kuryakyn™ products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025 Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2003 Kuryakyn USA™ All Rights reserved.

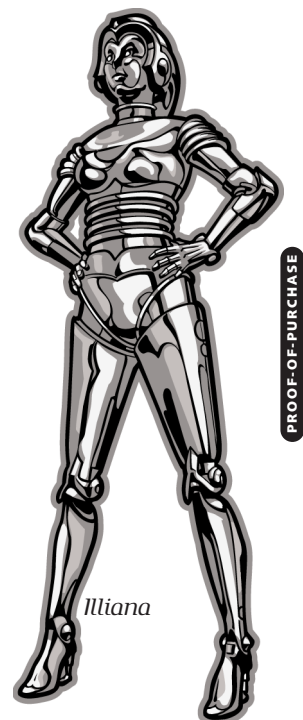

PROOF-OF-PURCHASE

*Illiana*