

Installation Instructions  
Ball Bearing Throttle Grips

Part No.	Description	Quantity
xx-xxx	Ball Bearing Throttle Grip	1
H-17	Insert, Handlebar-1	1
H-18	Insert, Handlebar-2	1
H-12	Bolt, Bearing Mount	1
H-329Z	Nut, Hex 5/16-18	1
H-363Z	Washer, Flat 5/16 x .975	1

1. Select the correct handlebar insert for your handlebars, it should be a slightly snug fit, there are 2 sizes in the kit.
2. Fit the 5/16 nut into the hex shaped cavity in the end of handlebar insert, install the bearing mount bolt with the 5/16 flat washer into the handlebar insert and screw it into the nut, (photo #1).
3. Fit the insert assembly into the end of the handlebar, (photo #2).
4. Tighten the bearing mount bolt, (photo #3).
6. Slide the throttle grip over the handlebar end until the inner race of the bearing is seated onto the end of the bearing mount bolt, (photo #4).
7. Attach the throttle cables and switch housings in the standard manner.



Photo #1

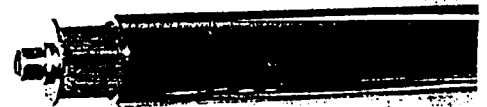


Photo #2

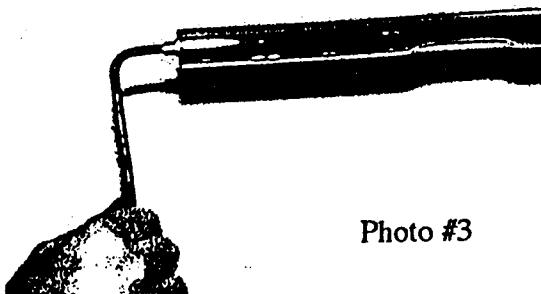


Photo #3

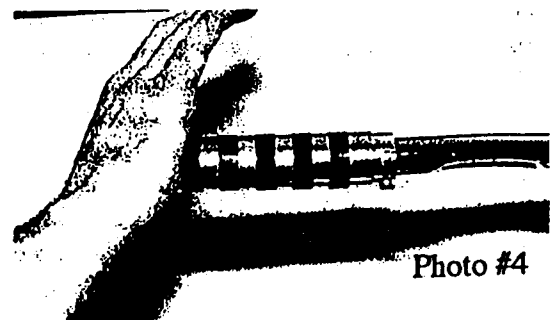


Photo #4