



INSTALLATION

UNIVERSAL THROTTLE BOSS

6251

TOOLS SUGGESTED

No extra hardware or tools are required for this installation.

PROCEDURE

AVERAGE TIME: 20 MINUTES

STEP 1 Position the Throttle Boss on the handlebar. Note that the "paddle" portion of the 'Boss' will end up under the "heel" of your hand.

STEP 2 While holding the paddle end in place, stretch the thinner rubber end around the hand grip and hook the slot in the rubber over the nub protrusion under the paddle portion of the Throttle Boss.

STEP 3 You may have to repeat this procedure a few times to get the Throttle Boss adjusted to your liking.

Ride On!

E-MAIL

techsupport@kuryakyn.com

WARRANTY

Kuryakyn™ warrants that any Kuryakyn product sold hereunder, if properly installed, maintained and operated under normal conditions, shall be free from any defects in materials and workmanship for a period of one (1) year from the date the Kuryakyn products are sold to the customer.


CONSEQUENTIAL DAMAGES: Kuryakyn shall not be liable for any consequential or incidental damages.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn™ product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2001 Kuryakyn USA™ All Rights reserved.

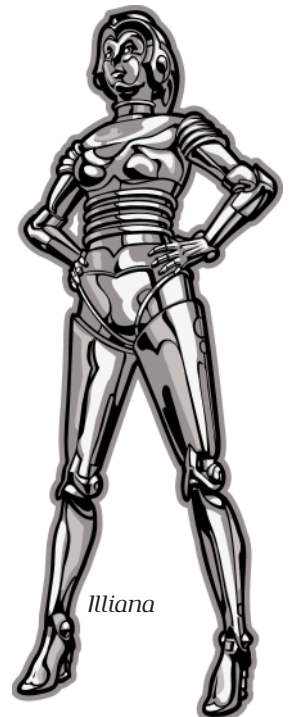

Illiana