



## PILOT PEGS WITH STIRRUPS

## 4428

**FITS: '84-UP H-D BIG TWIN, 91-UP XL'S 'USING MALE MOUNT PEGS**

### PARTS INCLUDED

- 1 Left Pilot Peg w/ Stirrup Assembly
- 1 Right Pilot Peg w/ Stirrup Assembly
- 1 Installation Instructions

*Please read and understand entire instructions before starting installation.*

### THANK YOU FOR CHOOSING KÜRYAKYN!

#### PLEASE NOTE

It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

#### TOOLS SUGGESTED

Allen wrenches, adjustable wrench or 1 1/8" wrench.

**ATTENTION!** A factory service manual may be helpful in performing this installation. Do not attempt to perform this installation if you are not confident in your ability to complete all steps in the procedure; consult a trained technician.

**CAUTION!** Prevent potential serious injuries! Be sure all fasteners are secure before riding and that the new components do not interfere with the proper operation of the shift or brake.

#### PROCEDURE

**STEP 1** Remove the existing foot peg; save the mounting hardware.



**STEP 2** Install the Pilot Peg with Stirrup Assembly using the existing hardware. See PIC.1. Be sure to install the D-washer(s) between the peg adapter and the clevis. Tighten nut.

#### TO ADJUST THE POSITION OF THE STIRRUP ARM:

**STEP 3** On the foot peg, loosen the front two screws. Remove the top plastic pad. See PIC.2.

**STEP 4** Remove brass fastener. Pull only upper rubber pad off of peg. See PIC.1.

-cont.-

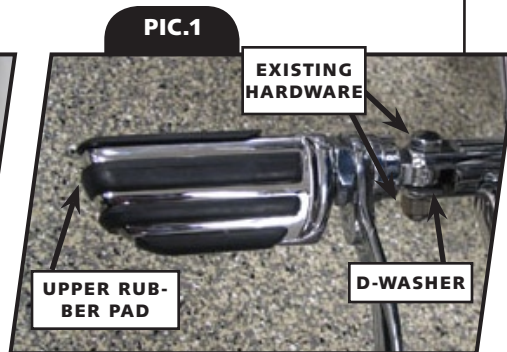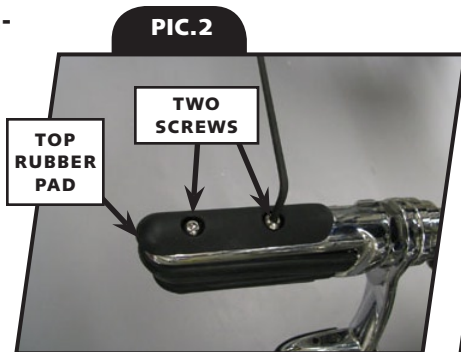

4428-11HD-0207

#### CUSTOMER SERVICE

877.370.3604 (toll free)

#### INSTALLATION QUESTIONS

techsupport@kuryakyn.com  
or call 715.247.2983

#### LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

#### ABOUT OUR CATALOG

For purchasing Kuryakyn products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.

PROOF-OF-PURCHASE

kuryakyn.com



**STEP 5** Loosen internal fastener enough to allow access with a wrench to the large nut securing the splined section of the stirrup arm. See [PIC.3](#).

**STEP 6** Loosen large nut enough to disengage splines. Adjust stirrup arm for clearance and comfort. See [PIC.4](#) and [PIC.5](#). Retighten large nut.

**STEP 7** Adjust Pilot peg for comfort; retighten internal fastener.

**STEP 8** Reinstall upper rubber pad and secure with the brass fastener.

**STEP 9** Reinstall top plastic pad and secure with the two screws.

**STEP 10** Repeat STEP 1 through STEP 9 for the opposite side.

### REPLACING THE RUBBER PADS ON THE STIRRUP:

**STEP 11** Remove the two set screws in the bottom of each stirrup. See [PIC.6](#).

**STEP 12** Remove the old rubber pads and replace with new rubber pads.

**STEP 13** Install the set screws and secure.

### REPLACING THE PADS ON THE FOOT PEG:

**STEP 14** Remove the two screws on the top of each foot peg. See [PIC.6](#).

**STEP 15** Remove the old top plastic pad.

**STEP 16** Remove brass fastener; pull out old rubber and plastic pads.


**STEP 17** Replace the rubber pads.

**STEP 18** Replace bottom plastic pad; secure with brass fastener.


**STEP 19** Replace top plastic pad; secure with two screws.

# Küryakyn®

**PIC.3**

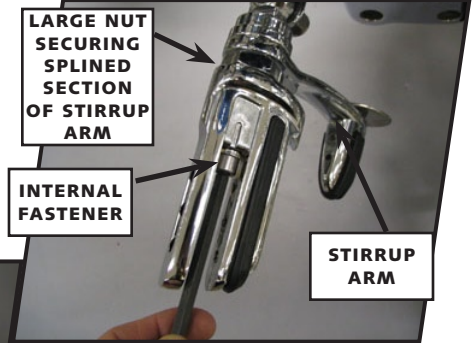


**PIC.4**

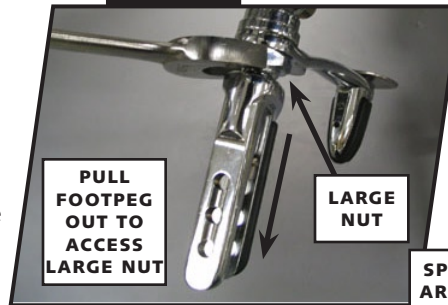

**PIC.5**



**PIC.6**

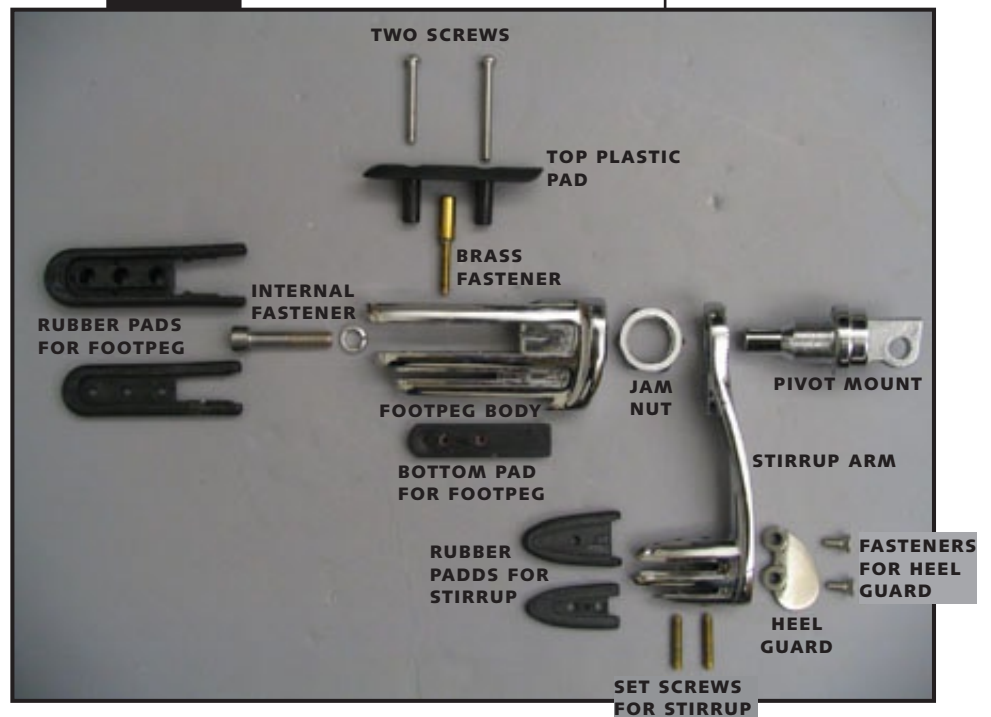

*Ride On!*

**PAGE**

**2**