



INSTALLATION



PILOT PEGS WITH MALE MOUNTS 4425

FITS ANY MODEL WITH H-D STYLE MALE MOUNT FOOTPEGS

PART #	INCLUDED
304425	2 Male Mount Pilot Pegs 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

PLEASE NOTE

It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

ATTENTION! A factory service manual may be helpful in performing this installation. Do not attempt to perform this installation if you are not confident in your ability to complete all steps in the procedure; consult a trained technician.

CAUTION! PREVENT POTENTIAL SERIOUS INJURIES; VERIFY ALL FASTENERS ARE SECURE BEFORE RIDING.

TOOLS SUGGESTED

Allen wrenches, combination wrenches.

PROCEDURE — INSTALLATION

STEP 1 Remove the stock footpeg; install the new footpeg using the stock fasteners.


STEP 2 To adjust the orientation of the footpeg, pull the upper rubber pad from the peg body; remove the two screws in the top plastic pad then remove the pad. Remove the brass fastener from the upper rubber pad.

STEP 3 Loosen the internal fastener and rotate the peg body to the desired position; tighten the internal fastener.

STEP 4 Install the upper rubber pad; install the brass set screw and tighten. Install the top plastic pad and the two set screws.

STEP 5 Repeat for the opposite side.

-cont.-

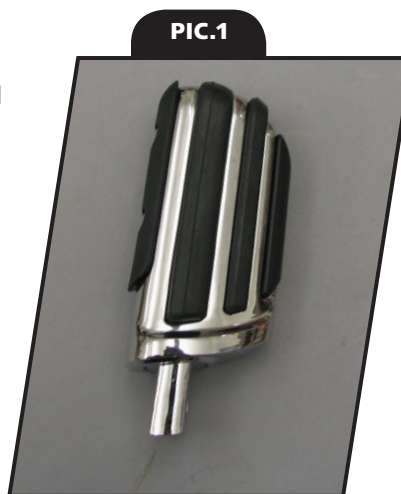

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn™ products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA™ All Rights reserved.

PROOF-OF-PURCHASE



kuryakyn.com

PROCEDURE — REPLACING THE RUBBER PADS

STEP 1 Remove the two screws from the peg body. Remove top plastic pad. Save old hardware for later use.

STEP 2 Remove brass fastener. Remove the two rubber pads and bottom plastic pad from the peg body; replace with the new pads.

STEP 3 Install the brass fastener and tighten.

STEP 4 Reinstall top plastic pad. Fasten with two screws.

STEP 5 Repeat for the opposite side.

*Ride
On!*

