



INSTALLATION

4" ADJUSTABLE LOCKABLE OFFSETS 4557

THE OFFSETS CAN BE USED TO REPOSITION ANY H-D STYLE MALE-MOUNT FOOTPEGS; EITHER PASSENGER PEGS OR HIGHWAY PEGS.

| PART # | INCLUDED |
|--------|--|
| 304557 | 2 4" Adjustable Lockable Offsets with Male Mount |
| | 1 Hardware Kit, including: |
| | 2 5/16" Chrome Hot Spots |
| | 2 3/8" Chrome Hot Spots |
| | 2 Anti-Seize Compound |
| | 1 Installation Instructions |

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

PLEASE NOTE

It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

TOOLS SUGGESTED


Allen wrenches, combination wrenches, or socket set depending on your configuration.

WARNING! The Adjustable Lockable Offsets are not compatible with any footpeg mounts fastened to the motorcycle with only a single fastener. Leverage applied to the mount by the offset arm will cause the mount to "twist" and loosen from the motorcycle. Do not use the Adjustable Lockable Offsets with any stock passenger peg mounts on FXR, '03 – earlier XL, or Softtail models. **FAILURE TO HEED THIS WARNING MAY CAUSE SERIOUS INJURIES OR DEATH!**


PROCEDURE

STEP 1 Determine if your footpeg mounts are compatible with the adjustable lockable offsets. See [PIC.1](#) and [PIC.2](#).

-cont.-

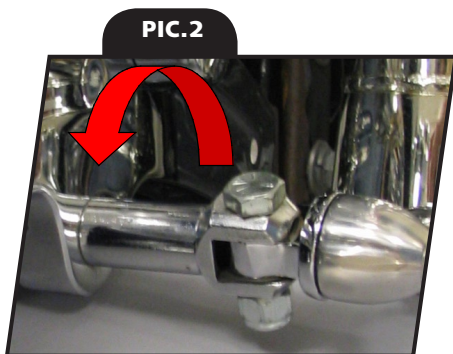

DANGER!
THIS TYPE OF FOOTPEG MOUNT WILL "TWIST" AND LOOSEN THE FASTENER SECURING IT TO THE MOTORCYCLE.

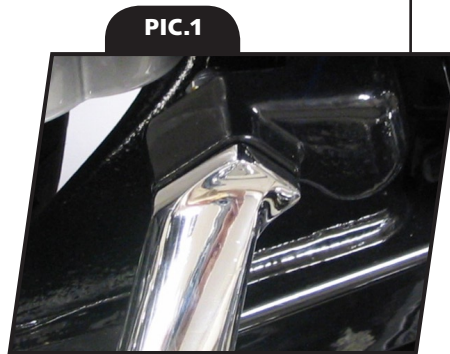

GOOD!
THIS TYPE OF FOOTPEG MOUNT CANNOT "TWIST" AND LOOSEN THE FASTENER SECURING IT TO THE MOTORCYCLE.

CUSTOMER SERVICE
877.370.3604 (toll free)

INSTALLATION QUESTIONS
techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY
Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.

PROOF-OF-PURCHASE



kuryakyn.com

STEP 2 Remove the existing footpegs; save the hardware for re-use.

STEP 3 Loosely assemble the components, using PIC.3 as a guide.

STEP 4 Install the right and left assemblies into the footpeg mounts; re-use the saved stock hardware to fasten the pivot mount.



STEP 5 Adjust the position of the offset arm on the splined pivot mount then secure the fastener.

STEP 6 Adjust the position of the footpeg and the splined clevis. Remove the footpeg and adjust the clevis to the desired position; secure with the clevis fastener. Reinstall the footpeg and secure with the footpeg fastener. See PIC.4.

NOTE Position the Spitfire Clevis so the peg mount stop is on the topside, regardless of which side the clevis is installed on the bike. (See PIC.5)

STEP 7 Verify the position of the footpegs for comfort. Verify all fasteners are secure.

STEP 8 Install the Hot Spots. Install the 5/16" Hot Spots over the footpeg fastener heads; install the 3/8" Hot Spots over the clevis-to-footpeg fastener.

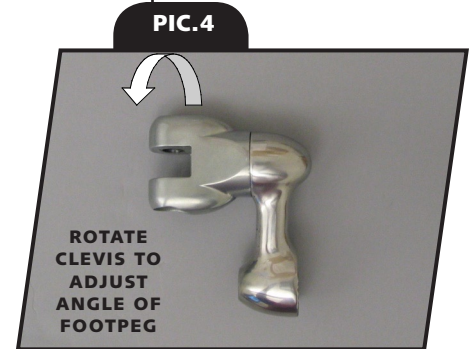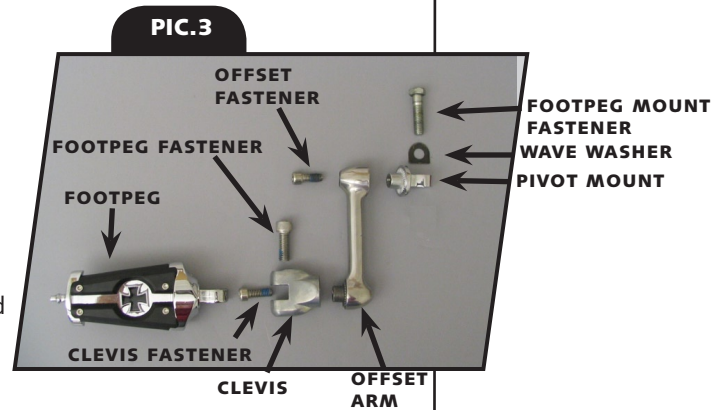

Ride On!

