



# INSTALLATION

## PHANTOM AXLE COVERS

## 8200

**FITS: '86-UP SOFTTAILS**

### PARTS INCLUDED

- 2 Chrome Phantom Axle Covers
- 2 "L" Brackets
- 4 10-32 x 1/2" B.S.C.S. — Stainless Steel
- 4 #10 Wave Washers
- 2 Mounting Tab Clamps
- 2 1/4"-20 x 7/8" H.H.C.S. — Stainless Steel
- 2 1/4" I.D. Internal Tooth Star Washers — Zinc
- 1 Installation Instructions

*Please read and understand entire instructions before starting installation.*

### THANK YOU FOR CHOOSING KÜRYAKYN!

#### PLEASE NOTE

It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

#### NOTE

Check to be certain there is clearance between the Phantom covers and saddlebags and/or the OEM "Shotgun" style pipes. These items may require spacing if adequate clearance does not exist.

#### TOOLS SUGGESTED

9/16", 7/16" Open end wrench, 1/8" Allen wrench

#### PROCEDURE

**STEP 1** Temporarily remove any accessories that obscure the axle and adjuster area. (I.E. Saddlebags)

**STEP 2** Using the 9/16" open end wrench, loosen the LOCK NUT only on the axle adjuster. Do not loosen the axle adjuster itself.


**STEP 3** On each side, insert the "L" bracket between the locknut and the swing arm as shown in PIC.1. Tighten the locknut securely clamping the "L" bracket into place.

**STEP 4** Install the Mounting tab clamp on the inside rear portion of each Phantom cover using one each star washer, and 1/4"-20 x 7/8" Hex head bolt. See PIC.2.

-cont.-



PIC.1

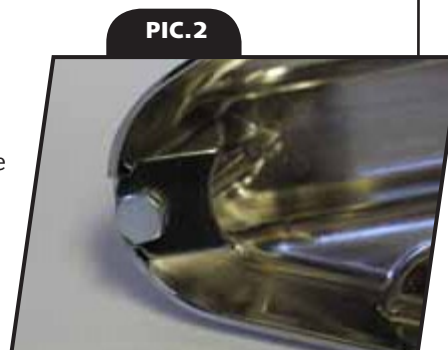

PIC.2

#### CUSTOMER SERVICE

877.370.3604 (toll free)

#### INSTALLATION QUESTIONS

techsupport@kuryakyn.com  
or call 715.247.2983

#### LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

#### ABOUT OUR CATALOG

For purchasing Kuryakyn products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.

PROOF-OF-PURCHASE



kuryakyn.com

**STEP 5** See [PIC.3](#). Hook the mounting tab clamp over the swing arm in the position indicated.

**STEP 6** Using two 10–32 B.S.C.S. and wave washers per side, secure the Phantom covers to the “L” brackets.

**STEP 7** Using your 7/16” open end wrench, tighten the mounting tab clamps.

**STEP 8** Re-install any accessories removed in STEP 1.

*Ride On!*

**Kuryakyn®**

**PIC.3**



**PAGE**

**2**