



INSTALLATION

CHROME SWINGARM COVERS

8288

WITH UN-LIGHTED PHANTOM COVERS

FITS: '86-'99 SOFTAIL

PART #	INCLUDED
8288	1 Swingarm Cover Set Including: 1 Upper Left Swingarm Cover Die Cast 1 Left Upper Tube Cover 1 Left Lower Tube Cover 1 Upper Right Swingarm Cover Die Cast 1 Right Upper Tube Cover 1 Right Lower Tube Cover
908186	1 Hardware Kit Including: 2 Upper Swingarm Bracket 1 Black Bracket 4 #8 Split Lock Washers 2 1/4" Flat Washer 1 1/4"-20 x 5/8" SHCS 2 6-32 x 5/16" HHCS 2 6-32 x 5/16" BSCS 1 1/4"-20 Nylock Nut 2 8-32 x 1/2" HHCS 4 1/8" x 3/8" Flat Washer
608256LC	1 Left Un-Lighted Phantom Cover
608256RC	1 Right Un-Lighted Phantom Cover
908288	1 Hardware Kit for Phantom Cover 2 Mounting Tab Clamp W/1/4" Hole 2 L-Bracket 2 1/4"-20 x 7/8" HHCS 2 1/4" Lock Washer 4 10-32 x 1/2" BSCS 4 #10 Wave (curved) Washer
308288	1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KURYAKYN!

PLEASE NOTE

It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

PROCEDURE

STEP 1 Identify the components used on the right and left sides of the bike. The frame tube covers are cut to length to exactly fit the lengths of tubing on each side of the swingarm. To identify placement of these different tube covers, look for cutouts that will fit around various contours and tabs welded to the swingarm. The rear axle or "Phantom" covers are identified with "L" or "R" on the inner surface.

-cont.-

8288-11HD-0306

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn™ products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA™ All Rights reserved.

PROOF-OF-PURCHASE

kuryakyn.com



STEP 2 See [PIC.1](#). Snap the chrome tubing covers into place on each side of the swingarm. Although these fit tightly, you may place a couple small dabs of silicone on the inner surface of each cover for added security.

STEP 3 Install the upper swingarm covers.

RIGHT SIDE: [PIC.2](#) and [PIC.2A](#) show the orientation of the “flat” and “P” style clamps on the cover. The “flat” clamp will be used on the end of the cover nearest the front of the bike, and the “P” clamp will be used nearest the rear. Just the P clamp is fastened with a 1/4”–20 x 5/8” Socket Head Cap Screw and a Nylock Nut. The flat clamp is fastened to the cover using the 6-32 x 5/16” fasteners. The HHCS is on the bottom and the SHCS is on the top. Do not over tighten the tension bolt that is screwed into the flat clamp. ([PIC.2](#)) Just tighten it up enough to take the movement out of the cover.

LEFT SIDE: This cover will attach in a similar manner to the right side, but instead of the “P” clamp in the rear location, it will attach to the belt guard mounting tab on the swingarm. The stock 5/16” bolt and nut will be used here, but a 5/16” flat washer will be placed over the mounting tab for added strength. ([PIC.3](#) shows an installed upper swingarm cover – right side).

STEP 4 Install the rear Phantom Covers. Check for proper side orientation. See [PIC.4](#). Install the small tab clamp to the rear of each cover as shown – loosely for now. Use the 1/4”–20 x 7/8” hex head bolts and 1/4” I.D. internal tooth star washers.

STEP 5 See [PIC.5](#). Loosen the rear axle adjuster lock nut – **DO NOT LOOSEN THE ADJUSTER!** Install the mounting brackets by sliding the brackets between the locknut and the frame as shown. Tighten the locknut against the bracket, firmly pinching the bracket into place.

STEP 6 See [PIC.6](#). “Hook” the rear tab clamp over the end of the Swingarm where indicated. Using the 10–32 B.S.C.S. and #10 Wave Washers, fasten the “Phantom” covers to the mounting brackets. Tighten the 1/4” bolt at the rear of the cover to tighten the tab clamps.

Kuryakyn™

PIC.1



PIC.2



PIC.2A



PIC.3




PIC.6



PIC.5



PIC.4

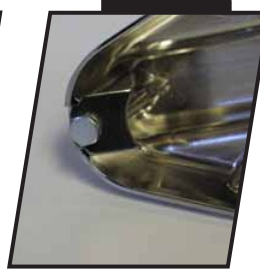

Ride On!

PAGE

2

CHROME SWINGARM COVERS

INSTALLATION