



CHROME SWING ARM COVERS

8108

FITS: '00-UP SOFTAIL MODELS (EX. DEUCE)

PART#	INCLUDED
408102LC	1 Left Upper Swing Arm Cover
408102RC	1 Right Upper Swing Arm Cover
908231	1 Hardware Kit Including:
200280	1 5/16"-18 x 1" Hex Head Cap Screw
200281	1 5/16" I.D. Flat Washer – Chrome
200098	3 1/4"-20 Nylock Nuts – Chrome
200152	3 1/4"-20 x 5/8" S.H.C.S. – Chrome
408231F	2 Flat Clamps for Upper Swing Arm Cover
408231C	1 "P" Clamp for Upper Swing Arm Cover
408102LLT	1 Left Lower Swing Arm Tube Cover – Chrome
408102LUT	1 Left Upper Swing Arm Tube Cover – Chrome
408102RLT	1 Right Lower Swing Arm Tube Cover – Chrome
408102RUT	1 Right Upper Swing Arm Tube Cover – Chrome
308108	1 Instruction Sheet

NOTE

In some instances, there will be a small gap between the tubular swingarm covers and the axle cover. The size of the gap will depend on the shape and style of the axle covers being used. If the potential of this gap causes concern, we suggest using our complete Swingarm Cover Kit with Lighted Phantom Covers.

TOOLS SUGGESTED


1/2", 7/16" Combination Wrenches, 1/8" and 3/16" Allen Wrenches, 1/2" Socket Wrench

PROCEDURE AVERAGE TIME: 30 MINUTES

STEP 1 Identify the components used on the right and left sides of the bike. The frame tube covers are cut to length to exactly fit the lengths of tubing on each side of the swing arm. To identify placement of these different tube covers, look for cutouts that will fit around various contours and tabs welded to the swing arm.

STEP 2 See PIC.1. Snap the chrome tubing covers into place on each side of the swing arm. Although these fit tightly, you may place a couple small dabs of silicone on the inner surface of each cover for added security.

-cont.-

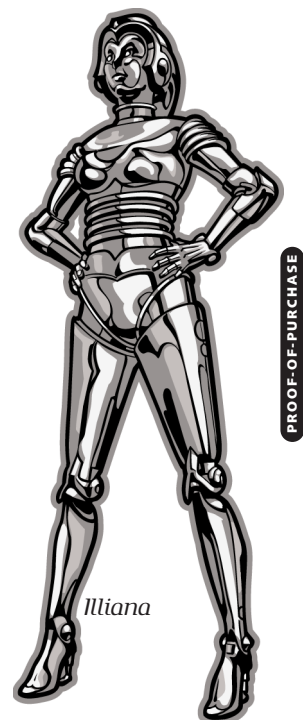

PROOF-OF-PURCHASE

Illiana

E-MAIL

techsupport@kuryakyn.com
or call 715.247.2983

WARRANTY

Kuryakyn™ warrants that any Kuryakyn product sold hereunder, if properly installed, maintained and operated under normal conditions, shall be free from any defects in materials and workmanship for a period of one (1) year from the date the Kuryakyn products are sold to the customer.

CONSEQUENTIAL DAMAGES:
Kuryakyn shall not be liable for any consequential or incidental damages.

ABOUT OUR CATALOG

For purchasing Kuryakyn™ products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025 Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2003 Kuryakyn USA™ All Rights reserved.

STEP 3 Install the upper swing arm covers.

RIGHT SIDE: PIC.2 shows the orientation of the "flat" and "P" style clamps on the cover. The "flat" clamp will be used on the end of the cover nearest the front of the bike, and the "P" clamp will be used nearest the rear. Both clamps are fastened with a 1/4"-20 x 5/8" Socket Head Cap Screw and a Nylock Nut (PIC.3).

LEFT SIDE: This cover will attach in a similar manner to the right side, but instead of the "P" clamp in the rear location, it will attach to the belt guard mounting tab on the swing arm. The stock acorn nut is reused, but we have included a longer-than-stock, 5/16"-18 x 1" hex head cap screw. Place the supplied 5/16" flat washer between the acorn nut and the upper cover's mounting tab.

PIC.2



PIC.3



Ride On!

PAGE

2