



INSTALLATION



REFLECTIVE SMOKE SADDLE SHIELDS 1188

FITS: '97-'07 TOURING MODELS (DRESSERS, ROAD KINGS, ROAD GLIDE, STREET GLIDE)

PARTS INCLUDED

- 1 Right Shield
- 1 Left Shield
- 1 Hardware Kit, including:
 - 2 10-32 x 3/4 Button Socket Cap Screw (BSCS)
 - 2 #10 Flat Washer
 - 2 10-32 Well Nut
- 1 Alcohol Cleaning Pad
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of hex wrenches, soapy water and a clean rag

ATTENTION! It is the installer's responsibility to ensure all fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn WILL NOT warranty components lost due to improper installation. Periodic maintenance may be required.

PROCEDURE

STEP 1 Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

-cont.-

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.

PROOF-OF-PURCHASE



WARNING! YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

STEP 2 Remove the seat, both of the saddlebags and the side covers; set them aside on a soft, sturdy surface to prevent damage.

STEP 3 Locate the two holes in the frame forward of the battery compartment shown in FIG.1.

NOTE Some models require elevating the wiring looms to allow access to the holes shown in FIG.1.

STEP A Remove the fastener securing the rear of the fuel tank to the frame and the two fasteners securing the front of the fuel tank.

STEP B Carefully lift the back end of the fuel tank up; support the rear end of the tank with a small block of wood.

STEP C Carefully lift the wire looms up to access the holes shown in FIG.1.

STEP 4 Insert the two included well nuts into the two holes shown in FIG.1.

STEP 5 Remove any grease or debris from the installation area (See FIG.1 and PIC.1) with soapy water and a clean rag; allow the area to dry completely.

ATTENTION! Thoroughly clean the area (See Fig. 1 and Pic. 1) of grease, oil, dirt, or other debris to ensure proper adhesion. Kuryakyn WILL NOT warranty any parts lost due to improper installation.

ATTENTION! The adhesive may not correctly bond if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 6 Clean the area (See FIG.1 and PIC.1) with the included alcohol cleaning pad; allow the area to dry completely.

STEP 7 Rub the backing on the adhesive strips on the underside of the Saddle Shields to activate the adhesive before installing.

STEP 8 Remove the adhesive backing from the adhesive strips on one of the Saddle Shields.




STEP 9 Align the hole in the Saddle Shield and the well nut and press into place (See PIC.2) for 1 minute to ensure proper adhesion. Full bond strength will occur within 24 hours.

STEP 10 Repeat STEP 8 and STEP 9 for the other side.

STEP 11 Place an included flat washer over an included 10-32 x 3/4 BSCS; insert it through the hole in the Saddle Shield and into the well nut in the frame.

STEP 12 Repeat STEP 11 for the other side.

-cont.-

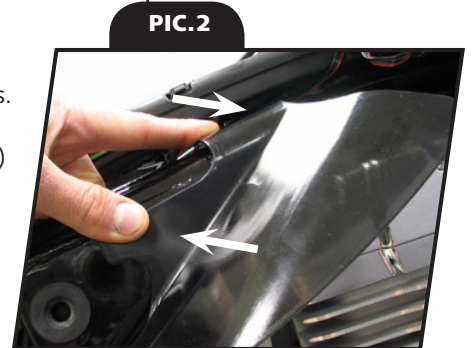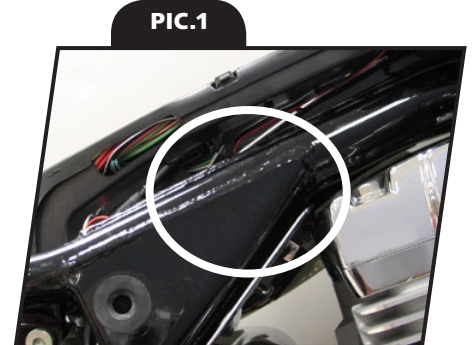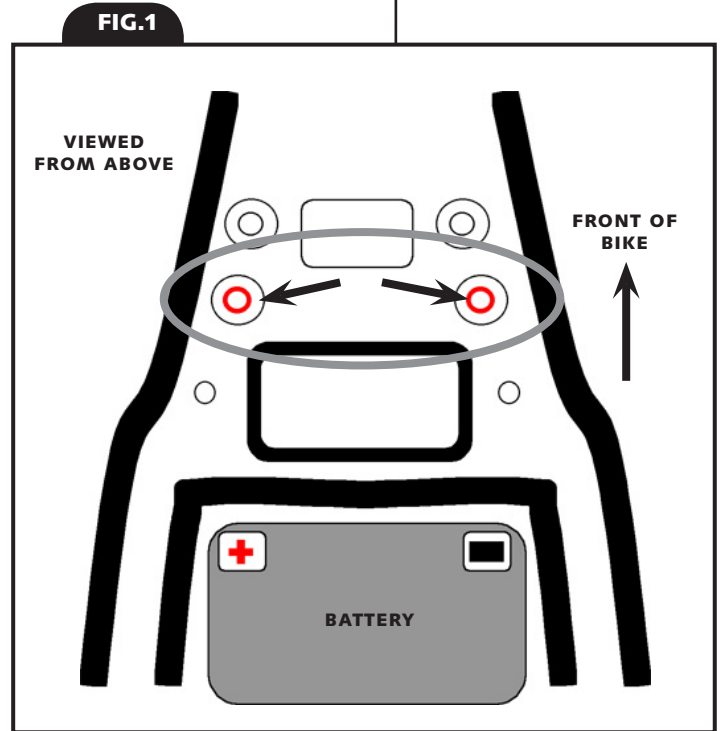

STEP 13 Tighten the screws until the well nuts expand enough to secure the fronts of the Saddle Shields.

STEP 14 Reinstall the side covers, saddlebags and seat.

STEP 15 Ensure proper clearance and operation before riding the motorcycle.

CAUTION! Clean only with warm water and a mild, non-abrasive soap. Some cleaning products contain harsh chemicals that can severely damage product and void warranty.

Ride On!

Kuryakyn®

PAGE

3

SADDLE SHIELDS

INSTALLATION