



INSTALLATION

UNLIGHTED SWINGARM COVERS 7815

FITS: '08-UP SOFTAIL (EX. DELUXE AND FAT BOY)

NOTE: WILL FIT DELUXE AND FAT BOY IF STOCK EXHAUST HAS BEEN REMOVED AND REPLACED WITH A STAGGERED DUAL OR 2-1 SYSTEM

PARTS INCLUDED

- 1 Upper Left Swingarm Cover
- 1 Lower Left Swingarm Cover
- 1 Upper Right Swingarm Cover
- 1 Lower Right Swingarm Cover
- 1 Left Phantom Cover
- 1 Right Phantom Cover
- 1 Hardware Kit including:
 - 2 Curved Clamps
 - 2 Mounting Tab Clamp
 - 4 1/4-20 x 3/4 Hex Head Cap Screws (HHCS)
 - 4 1/4" Lock Washers
 - 4 1/4" Flat Washers
 - 1 Alcohol Pad
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of combination wrenches/ratcheting combination wrenches, warm soapy water and clean rag.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

-cont.-

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



PROCEDURE

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

WARNING! YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

STEP 2 Clean the swingarm tubes using warm soapy water and a clean rag and allow them to dry.

STEP 3 Referring to PIC.1, determine the upper and lower covers for the right and left sides.

NOTE When installing the covers on the right side it may be helpful to loosen the exhaust.

STEP 4 Starting with the right side, test fit the upper and lower cover. They are designed to be placed so that the end of the cover is just above the weld as shown in PIC.2.

NOTE The covers should snap into place when they are installed, if they are loose, you may lightly squeeze the cover to achieve a tighter fit.

STEP 5 Clean the swingarms with the included alcohol-cleaning pad in the location where the adhesive inside the covers will sit, as well as the backside of the upper swingarm tubes, and allow the area to fully dry.

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Kuryakyn WILL NOT warranty any parts lost due to improper installation.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 6 Using the back of your fingernail, rub the backing of the adhesive pad on the upper cover to activate the catalyst, and remove the backing.

STEP 7 Install the upper cover and press and hold in place for one (1) minute, full bonding strength will occur in 24 hours.

STEP 8 Using the back of your fingernail, rub the backing of the adhesive pad on the lower cover to activate the catalyst, and remove the backing.

STEP 9 Install the lower cover and press and hold in place for one (1) minute, full bonding strength will occur in 24 hours


STEP 10 Repeat STEP 4 through STEP 9 for the left side.

CAUTION! Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.


-cont.-

Kuryakyn®

PIC.1

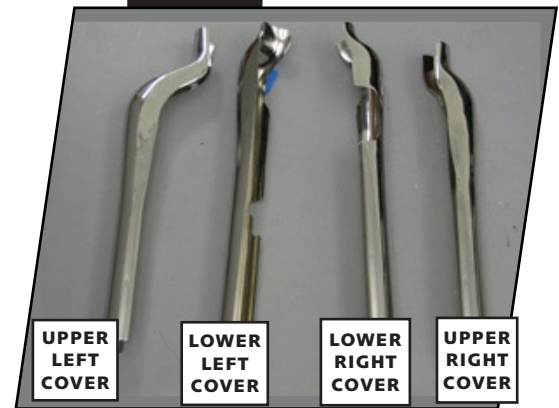

PIC.2

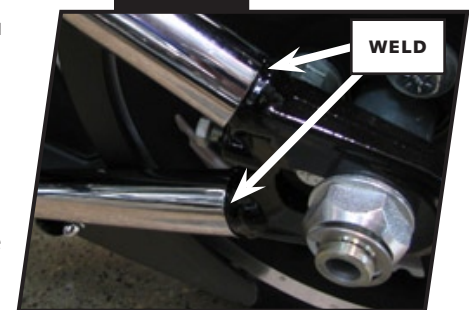

PAGE

2

SWINGARM COVERS INSTALLATION

PHANTOM COVER INSTALLATION

STEP 11 Determine the left cover; the curved clamp will be placed over the upper swingarm tube as shown in [PIC.3](#)

STEP 12 Install the curved clamp on the inside of the cover so that the curve faces the inside of the cover as shown in [PIC.3](#). Using the included hardware, start a screw, lock washer and flat washer through the curved clamp and into the cover.

NOTE Do not tighten the screw for the clamp or the mounting tab; they will be tightened once the cover has been installed.

STEP 13 Install the mounting tab on the inside of the cover as shown in [PIC.3](#), it will sit on the ledge that is shown in [PIC.4](#). Using the included hardware, start a screw, lock washer and flat washer through the mounting tab and into the cover.

STEP 14 Hold the cover at a slight angle, slide it over the swingarm so that the mounting tab hooks behind the swingarm, and then push the cover in place.

STEP 15 Rotate the curve clamp so that it is over the swingarm tube and tighten both of the screws that secure the clamp and mounting tab.


STEP 16 Repeat STEP 11 through STEP 15 for the right side.

CAUTION! Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding


ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

Ride On!

Kuryakyn[®]

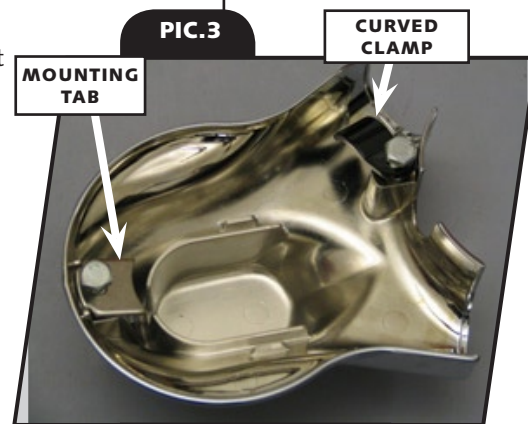

LEFT COVER

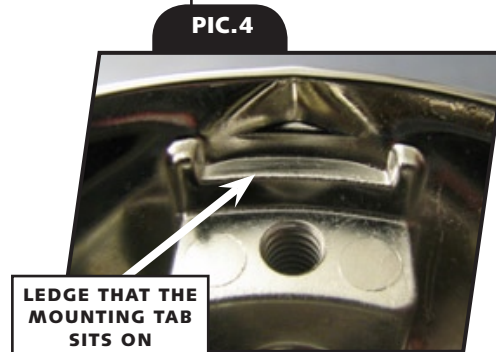

PAGE

3