


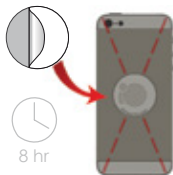

INDIAN | FITS 2014+ VINTAGE, DARK HORSE, CLASSIC, AND CHIEFTAIN

1. ADAPT

Clean the surface of your device. Center the iOadapt™ on your device then apply with firm pressure to device or case while on a flat surface and adhere. **Allow adhesive to set at least 8 hours before first use. For best results, let it set overnight.**



2. INSTALL

The Kustom Semisphere Mount bolts to the stock controls. Remove 2 bolts from the controls, line up the mount, and use the included hardware to tighten. Follow factory specs.

Tools Needed: T30 torx



3. ATTACH

Once the iOcore is placed on the Semisphere, your device is ready to be firmly attached.



GETKLOCKED.COM


iOmounts™ COMPONENTS



iOadapt™

The iOadapt™ is a stainless steel disk that attaches to your smartphone, tablet, e-reader or other approved device.

NOTE: The iOadapt™ is NOT a magnet!



iOcore™

The iOcore™ is a magnetic cylinder that connects your devices to the motorcycle mounts, stands, wall mounts, car mounts and other iOmounts™ products once the iOadapt™ is adhered to your device. (Available in many colors.)

APPLICATION NOTES

- ➔ Each iOadapt™ utilizes permanent adhesive and is very difficult to remove once applied. Klock Werks and/or iOmounts™ are not responsible for any damages caused by the removal of the iOadapt™.
- ➔ iOadapts™ supplied with the nomad™ and motorcycle-specific mounts are intended for phones and smaller devices only, and will not support full size tablets, e-readers and larger devices.
- ➔ Do not use on silicon type or heavily textured cases!

WARNING: When riding or driving, please follow your state laws regarding device use.

GETKLOCKED.COM