



## TOUR-PAK RELOCATOR

## 1559

**FITS: '98-UP H-D TOURING MODELS WITH H-D TOUR PAK®  
NOT COMPATIBLE WITH H-D ENHANCED SOUND SYSTEM**

### PARTS INCLUDED

- 1 Relocator Bar for Tour Pak
- 2 Bar Support, Chrome
- 2 Extended Support Bar Top Clamp
- 4 1/4"-20 x 5/8" Socket Head Cap Screw
- 5 5/16"-18 X 2-3/8" Button Socket Cap Screw
- 7 5/16"-18 Chrome Nylock Nut
- 14 5/16" Chrome Flat Washer
- 2 5/16"-18 X 7/8" Button Head Cap Screw
- 2 5/16"-18 X 3/4" Button Head Cap Screw
- 2 5/16"-18 Split Lock Washer
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

### THANK YOU FOR CHOOSING KÜRYAKYN!

**ATTENTION!** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

### TOOLS SUGGESTED

Set of Standard Combination Wrenches, Set of Standard Hex Keys, Set of Torx Keys, 5/16" Drill Bit and Drill.

### PROCEDURE

**STEP 1** Remove the Seat and the saddlebags. Set them aside.

**STEP 2** Remove the rubber mat in the bottom of the Tour Pak®. Disconnect the radio antenna wire and any other wires. Remove the rubber grommet at the wire inlet hole and pull all the wires free from the Tour Pak®.

**STEP 3** Remove the screws that secure the Tour Pak® to the stock support bar. Carefully lift the Tour Pak® and set it aside.

**STEP 4** Remove the fasteners that hold the license plate bracket to the support bar.

**STEP 5** Remove the chrome covers from the fender struts; each is secured by one screw.

**NOTE:** For models equipped with the metal hand rest, loosen the two nuts under the seat to allow the chrome covers to be moved.

**STEP 6** Remove the mounting bolts at the front of the Tour Pak® support bar; depending on the year of the bike, they could be hex head or Torx T45. Lift and remove the support bar. Use caution to avoid scratching the fender.

-cont.-

**CUSTOMER SERVICE**  
877.370.3604 (toll free)

**INSTALLATION QUESTIONS**  
techsupport@kuryakyn.com  
or call 715.247.2983

### LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in non-conforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

### ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.

PROOF-OF-PURCHASE

kuryakyn.com



**STEP 7** Loosely install the Bar Supports, channel side up, on top of the license plate bracket. Use the center hole in the Bar Supports and fasten with 5/16"–18 x 3/4" Button Head Cap Screws, 5/16" Flat Washers, and 5/16"–18 Nylock Nuts (See FIG.1).

**STEP 8** Set the Relocator Bar in place and fasten the front loosely with the 5/16"–18 x 7/8" Button Head Cap Screws provided. The slotted holes in the Bar Supports should line up with the holes in the Relocator Bar, if the holes do not line up, rotate the Bar Supports 180°. Lift the Relocator Bar slightly and securely tighten the 5/16"–18 x 3/4" Button Head Cap Screws holding the Bar Supports to the license plate bracket. Lower the Relocator bar into place on top of the Bar Supports then securely tighten the front fasteners.

**STEP 9** Position the Extended Support Bar Top Clamps over the support bar; secure them with the included 1/4"-20 x 5/8" Socket Head Cap Screws. See FIG.1.

**STEP 10** Reinstall the chrome fender strut covers removed in STEP 5.


**STEP 11** Set the Tour Pak® in place on the Relocator Bar. Fasten securely using the five supplied 5/16"–18 X 2-3/8" Button Head Cap Screws, 5/16" Flat Washers, and 5/16"–18 Chrome Nylock Nuts.

**NOTE:** It may be necessary to enlarge the mounting holes in the sheet metal Tour Pak® floor plate using a 5/16" drill bit. If so, mark the appropriate holes, remove the sheet metal floor plate from the Tour Pak®, and drill them on a workbench.

**STEP 12** Route and reconnect the radio antenna wire and any other wires disconnected in STEP 2. Replace the rubber grommet and rubber mat.

**STEP 13** Reinstall the saddlebags and seat.

**FIG. 1**

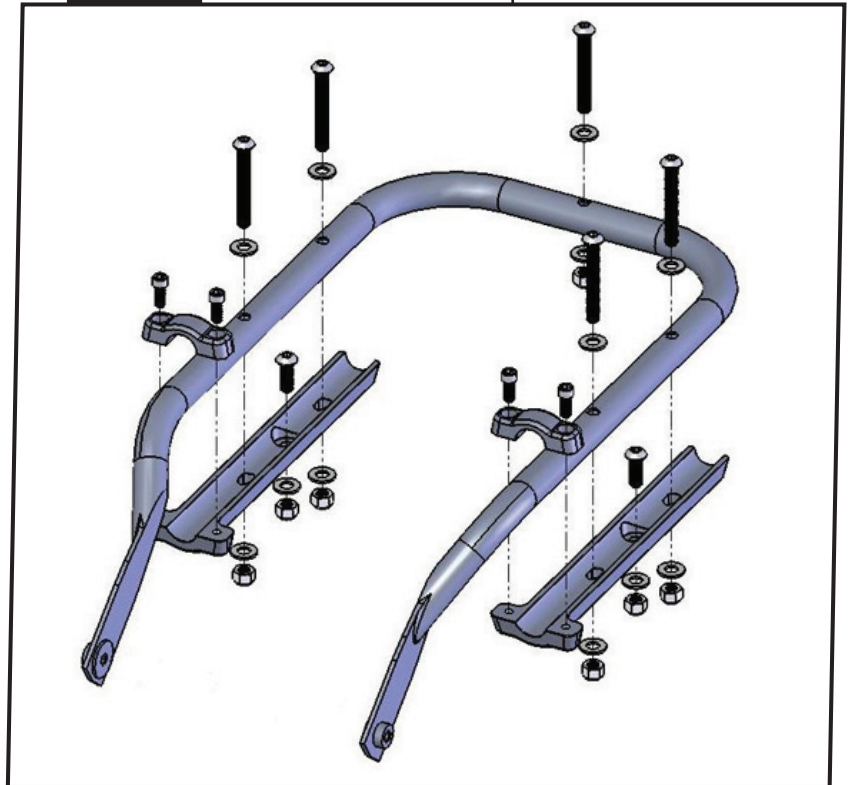

*Ride On!*