



INSTALLATION

SIDE COVER & SADDLEBAG ACCENTS 8645

FOR H-D TOURING

FITS: HARLEY DAVIDSON '93 - '08 ELECTRA GLIDES, TOUR GLIDES, ROAD GLIDES, STREET GLIDE, & ROAD KINGS WITH HARD SADDLEBAGS

PARTS INCLUDED

- 1 Right Side Cover Accent
- 1 Left Side Cover Accent
- 1 Right Front Saddlebag Accent
- 1 Left Front Saddlebag Accent
- 1 Right Side Saddlebag Accent
- 1 Left Side Saddlebag Accent
- 4 Alcohol Pads
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.


PROCEDURE

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

STEP 2 Identify left hand & right hand side cover & saddlebag accents. See PIC. 1.

STEP 3 Kuryakyn recommends that you begin installation by estimating placement location on the side cover. The Side Cover Accents are the mid length pieces and have a bend at one end and a curved edge at the other. You should use the curved edge as a reference to the lower-rear corner of the side cover, making sure that the bend at the other end follows the profile of the side cover. See PIC. 2.

-cont.-

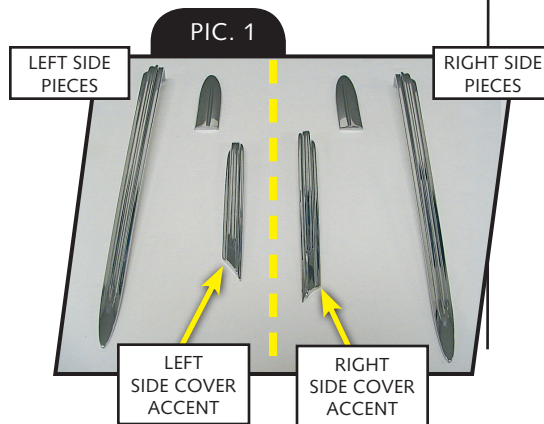

CUSTOMER SERVICE
877.370.3604 (toll free)

INSTALLATION QUESTIONS
techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY
Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.

PROOF-OF-PURCHASE

kuryakyn.com



STEP 4 Prep mounting area with a supplied alcohol pad.

STEP 5 Using the back of your fingernail, rub the back of the double-sided tape to activate the catalyst and to help release the backing.

STEP 6 Remove the tape backing and place accent onto the side cover; press firmly for 60 seconds, the adhesive will fully cure in 24 hours.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 7 Repeat steps 2 thru 6 for the other side.

STEP 8 Identify & dry fit the Side Saddlebag Accents, they are the longer pieces in the kit and should be placed visually in line with the Side Cover Accent. Note how the shape of the correct trim piece will follow the shape of the saddlebag while in a horizontal position. See [PIC. 2](#).

STEP 9 Prep mounting area with a supplied alcohol pad.

STEP 10 Using the back of your fingernail, rub the back of the double-sided tape to activate the catalyst, and to help release the backing.

STEP 11 Remove the tape backing and place accent onto the saddlebag; press firmly for 60 seconds, adhesive will fully cure in 24 hours.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 12 Repeat steps 8 thru 11 for the other side.

STEP 13 Dry fit the Front Saddlebag Accent where the Side Saddlebag Accent ends on the front of the saddlebag. The groove will align if you have the correct piece. During this step, you should verify the visual line between the Side Cover Accent & the Side Saddlebag Accent and be sure to place the Front Saddlebag Accent in line between them. See [PIC. 2](#).

STEP 14 Prep mounting area with a supplied alcohol pad.


STEP 15 Using the back of your fingernail, rub the back of the double-sided tape to activate the catalyst and to help release the backing.

STEP 16 Remove the tape backing and place accent onto the saddlebag; press firmly for 60 seconds, adhesive will fully cure in 24 hours.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 17 Repeat steps 13 thru 16 for the other side.

PIC. 2

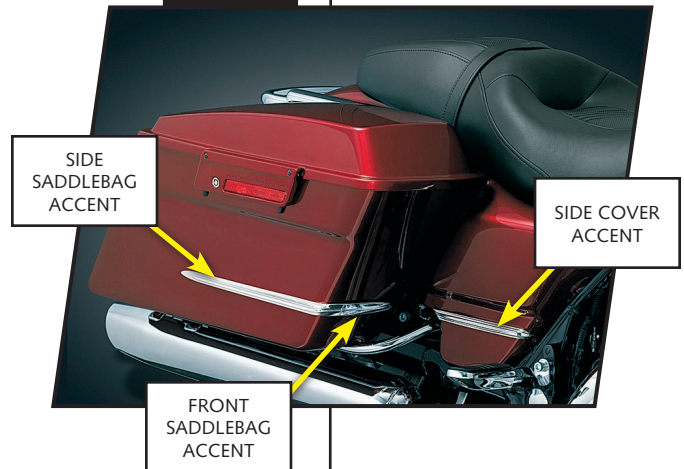

Ride On!