


## TIEDOWN FITTING OPERATION

1. Grasp the fitting retainer between index and middle fingers.
2. Depress stud with thumb.
3. Slide the stud foot into the slot on the anchor plate until it is centered and retainer is aligned with slot.
4. Release thumb pressure to attach fitting to anchor plate.
5. Check to ensure that retainer is seated properly in anchor plate.

## COMPONENT PARTS

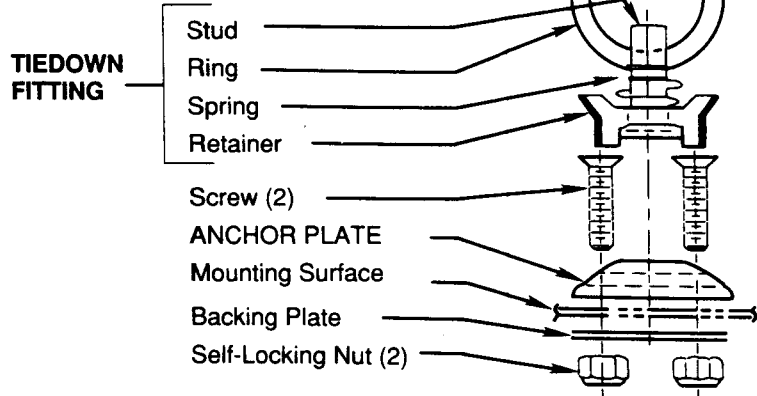

# ANCRA

TIEDOWN KIT ..... P/N40890-10 ●  
 ANCHOR PLATE ONLY .. P/N40890-11 □  
 TIEDOWN ONLY ..... P/N40890-12 □

Made in U.S.A.

Provides attachment ring for tiedown strap, rope, etc. Check these important features:

- Aircraft Quality
- Positive Lock
- Quick Release
- Low Profile Anchor Plate
- Dirt Free
- Strong, secure; leaves no protruding hardware when not in use.
- Mounting Hardware Included

TIEDOWN FITTING PLATE



# ANCRA

Hawthorne, California 90250

## ANCHOR PLATE INSTALLATION AND LOADING DIAGRAM

