



INSTALLATION



UNIVERSAL KICKSTAND EXTENSION 7108

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



PROOF-OF-PURCHASE

kuryakyn.com

FITS: UNIVERSAL KICKSTANDS WITH 1/2" TO 3/4" DIAMETER
SUGGESTED FITMENT:
HONDA: ALL VTX1800 AND VTX1300
KAWASAKI: VULCAN 2000, 1600 & 1500
SUZUKI: C50 & C90
YAMAHA: ALL ROAD STAR 1600 AND 1700, V STAR 1300, 1100 & 650 MODELS

PARTS INCLUDED

- 1 Extension Arm
- 1 Serrated Clamp Base
- 1 M6 U-bolt Clamp
- 2 M6 Nylon Insert Hex Lock Nut
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Combination wrenches or socket set and ratchet

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

STEP 2 The Universal Kickstand Extension can be installed four different ways. See PIC.1 on the following page for suggested assembly possibilities. Determine which configuration will allow for function and clearance from frame tubes, engine covers, floorboards and footpegs, shift levers, shift linkages, etc BEFORE installation.

-cont.-

CAUTION! Avoid damage to the motorcycle. Protect painted and chrome surfaces with a soft cloth or blanket.

Kuryakyn®

STEP 3 PIC.2 shows a possible configuration on a motorcycle. Ensure that there is at least 1/4" clearance from frame tubes, engine covers, floorboards and footpegs, shift levers, shift linkages, etc when the kickstand is retracted and deployed.

STEP 4 Slide the U-bolt clamp around the kickstand.

STEP 5 Push the serrated clamp base onto the U-bolt. See PIC.1.

ATTENTION! Determine the mounting location and orientation of the kickstand extension before fully tightening the clamp. The serrated base clamp may leave marks when tightened down.


STEP 6 Place the kickstand extension on the U-bolt in the desired position.

STEP 7 Secure the assembly together with the two M8 nylon insert lock nuts. Tighten the nuts evenly on the U-bolt.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

STEP 8 Ensure proper clearance and operation before riding the motorcycle. Be aware that cornering clearance may be reduced with the addition of the kickstand extension.

WARNING! IMPROPER INSTALLATION OR USE OF THIS PRODUCT COULD RESULT IN SERIOUS INJURY OR DEATH.

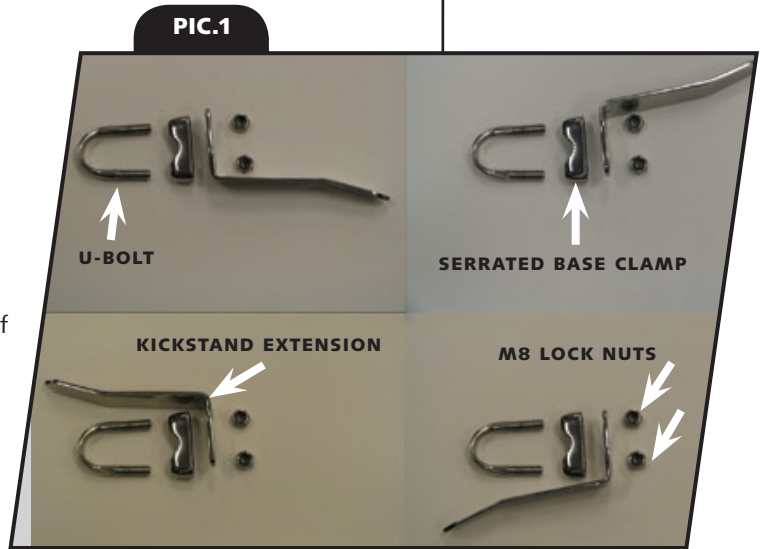

Ride On!

PAGE
2

KICKSTAND EXTENSION INSTALLATION