



INSTALLATION



FLAMIN' PEGS 4416 / 4417

4416 FITS: MANY METRIC MODELS BUT REQUIRES MODEL-SPECIFIC ADAPTER, SOLD SEPARATELY

4417 FITS: ANY MODEL WITH H-D STYLE MALE MOUNT FOOTPEGS.

PARTS INCLUDED

- 1 Flamin' Peg Assembly (pr)
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

PLEASE NOTE

It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

WARNING! IMPROPER INSTALLATION OR MISUSE OF THIS PRODUCT COULD RESULT IN SERIOUS PERSONAL INJURY OR DEATH.

METRIC NOTE You can purchase the appropriate adapters from the main Metric footpeg Web Page at www.kuryakyn.com. If any additional mounting hardware is necessary, it will be included with the adapters.

TOOLS SUGGESTED

Set of hex wrenches, set of combination wrenches.

PROCEDURE

STEP 1 Remove the existing footpeg; save the mounting hardware for reuse.

STEP 2 (Metric only) Place the adapter that you have purchased separately into the end of the Flamin' peg and just finger tighten the fastener in PIC.1.

STEP 3 Install the left and right Flamin' Pegs in the footpeg mounts on the motorcycle. Leave the footpeg adapter fastener loose for now.

NOTE The footpeg mount will positively engage the peg when tightened; determine the desired position before fully tightening.

STEP 3 Adjust the angle of the footpeg on the male mount then secure with the footpeg fastener.

STEP 4 Check the angle for comfort; re-adjust if necessary. Repeat for the opposite side.

-cont.-

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG


For purchasing Kuryakyn products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.

PROOF-OF-PURCHASE



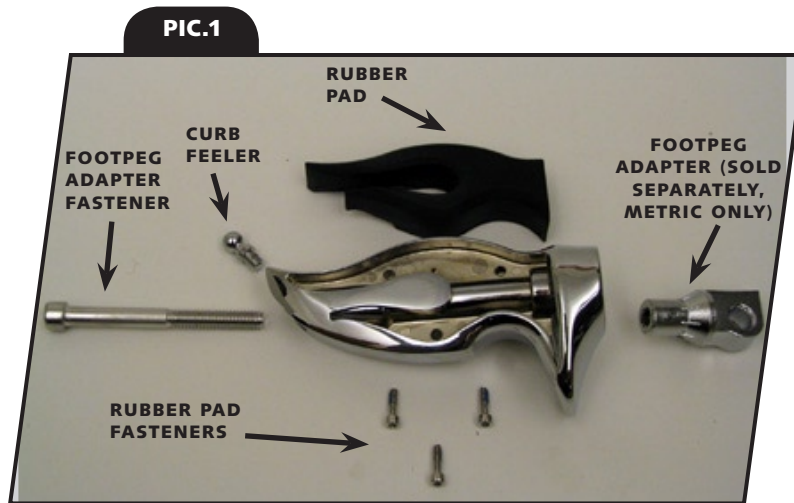

REPLACE THE CURB FEELERS

When the curb feelers become worn, replace them with Küryakyn P/N 404475CF. Be sure to use red Loctite on the threads to secure the fitting.

REPLACE THE RUBBER PADS

When the rubber pads become worn, replace them with Küryakyn P/N 424411 and 434411. Remove the footpegs from the motorcycle, then remove the fasteners securing the rubber pads, see [PIC.1](#). Install the new pads and secure with the fasteners.

Ride On!