




V-1105 VICTORY CHROME SHOCK LINKS

Thank you for purchasing this Arlen Ness product. We believe that our products are the very best available and are engineered to provide a lifetime of use. Our chrome shock links dress up an otherwise overlooked area on your motorcycle and can be installed on all Victory models. Basic hand tools and a service manual applicable to your model of motorcycle are all that is necessary to complete the installation.

BILL OF MATERIALS		
Part #	Quantity	Description
V-1105-1C	2	Victory shock link, stock length, chrome

MAINTENANCE TIP: To keep your new chrome shock links looking their best, we recommend applying a high-quality chrome polish to them every time you detail your motorcycle.

STEP 1: Following the procedure outlined in the appropriate service manual for your year and model of motorcycle, remove the existing rear shock links. The new chrome shock links can be placed back over the shock bolt bushings and the hardware can be re-installed.

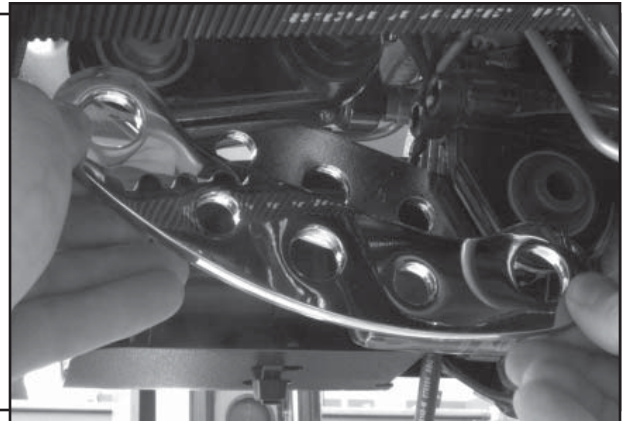

STEP 2: To finish the installation, follow the procedure outlined in the appropriate service manual for your year and model of motorcycle for proper torque values on the shock link hardware. Verify that your motorcycle has proper suspension travel prior to test riding.

