



FRONT FENDER EXTENSION

7352

FITS: GL1800

PART#	INCLUDED
407352	1 Front Main Splash Guard – Chrome
407352R	1 Lower Rubber
407352RS	1 Lower Rubber Support
200863	5 #3 x 3/8" Screw
407352DC	2 End Caps - Chrome
407352	2 Fender Aluminum Step Spacers
407352T	1 Mounting Tape
407352RLH	1 Side Rubber – Left
407352RRH	1 Side Rubber – Right
200864	2 .50 O.D. x .22 I.D. Flat Washers
200865	2 10-24 Nylock Nuts
307352	1 Installation Sheet

TOOLS SUGGESTED

7/32" Drill bit, 3/8" Combination wrench, Fine tip non-permanent marker, Glass cleaner or mild solvent, Clean rag, Drill

PROCEDURE AVERAGE TIME: 20 MINUTES

STEP 1 Thoroughly clean the bottom portion of the front fender where the extension will be installed, with glass cleaner or other mild solvent. All wax, oily residue etc. must be removed or the adhesive may not hold to its full potential.



STEP 2 Trial fit and make installation reference marks. See PIC.1.

NOTE: There are two vertical tabs that are cast into the back-side of the fender extension. These are fender stops. Both tabs should contact the bottom lip of the fender to insure a straight, level orientation. We suggest leaving the adhesive backing on the fender extension and holding the extension into place; this will allow slight movement from side to side so the extension can be positioned to line up with the contour of the fender on both sides. When you are satisfied with the positioning of the extension, hold it firmly in place and mark the (larger) hole locations as well as along the top of the fender extension with a non permanent fine tip marker.

Attention: IF your bike was previously equipped with a Honda fender extension the holes are already drilled, but they will be too large. Two stepped reducing spacers are included. These spacers may be inserted into these holes from the inside of the fender to reduce the hole size.

STEP 3 Remove all adhesive backing from the inside of the fender extension.

-cont.-

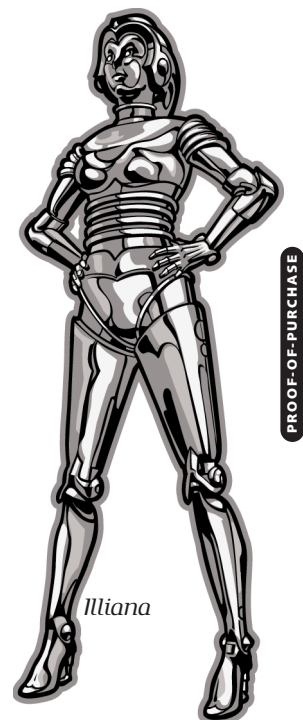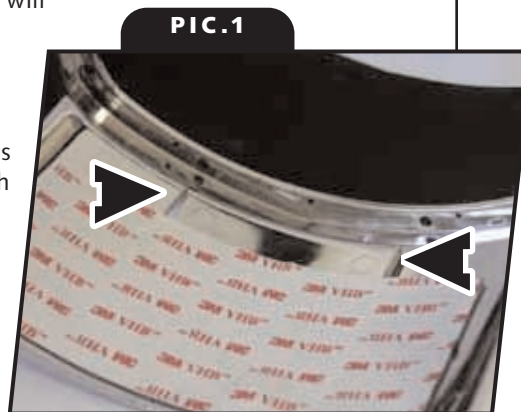

PROOF-OF-PURCHASE

E-MAIL

techsupport@kuryakyn.com or call 715.247.2983

WARRANTY

Kuryakyn™ warrants that any Kuryakyn product sold hereunder, if properly installed, maintained and operated under normal conditions, shall be free from any defects in materials and workmanship for a period of one (1) year from the date the Kuryakyn products are sold to the customer.

CONSEQUENTIAL DAMAGES: Kuryakyn shall not be liable for any consequential or incidental damages.

ABOUT OUR CATALOG

For purchasing Kuryakyn™ products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025 Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2003 Kuryakyn USA™ All Rights reserved.

NOTE: You must be very careful during the installation of the extension. The adhesive is very strong and is intended for a one-time, permanent, installation. Work slowly and precisely. Using the marks you made on the fender, as well as the fender stops inside the extension, set the extension in place and apply firm pressure for at least 30 seconds to insure a good, complete adhesive bond.

STEP 4 While holding the sides of the fender extension tightly against the fender, use the larger holes in each side of the extension as a template to drill the 7/32" mounting holes. The smaller holes on each side are for indexing pins only - do not drill any holes in these locations.

Caution: Use care not to drill into your tire!

STEP 5 Insert the studs on the two end caps into the holes you just drilled. The small indexing pins will insert into the smaller of the two holes on each side of the extension. Secure the end caps into place with the included flat washers, and 10-24 Nylock nuts. Do not over torque these nuts.

STEP 6 Wipe off any visible installation marks and fingerprints.

Ride On!